



DIGITAL SIGNAGE QUICK START GUIDE



HELLO THERE!

LET'S GET STARTED

Getting your media player up and running is as easy as powering it up, plugging in the HDMI cable, and connecting it to Wi-Fi.

However, if you need any help, this guide provides a more in-depth, step-by-step guide, plus useful links and contact information for managing your media player.

HARDWARE

WHAT'S IN THE BOX



Media Player



HDMI Cable



Remote



Power Adapter



2 AAA Batteries



Velcro Patch

HARDWARE

MEDIA PLAYER AT A GLANCE



Ethernet

HDMI

Power In



Player
Memory

USB
Remote
Dongle

STEP 1**INSTALL YOUR MEDIA PLAYER**

Your media player should be installed in an easily accessible location. Install it on the top, bottom, or side of your TV, or at the top of your TV's back side using the velcro strips included. Or simply place it on a table. Position the blank side facing the space where you plan to use the remote.

What You'll Need

- HDTV with an available HDMI input
- Broadband Internet connection
- Wired or wireless network
- Power outlet near your HDTV

STEP 2

CONNECT TO YOUR TV

Connect an HDMI cable (3ft/1m cable included) between the HDMI port on your media player and an HDMI IN port on your TV.

Many TVs have multiple HDMI inputs. Make note of the number you use (for example, HDMI 3).



STEP 3

POWER ON

Insert two AAA batteries (included) into your remote by turning the remote over and sliding the bottom half downward.

Connect the power adapter to your media player and a power outlet.



STEP 4

HOME SCREEN

Your media player will start up to your Home Screen. Before you can begin playing content, you must connect it to the internet as shown in Step 6.




Tip: If your media player begins playing content automatically, you still need to connect it to the internet so it can receive changes/updates.

STEP 5

REMOTE FUNCTIONS

Your media player receives commands from the remote via the USB dongle (as seen on the Media Player at a Glance page).

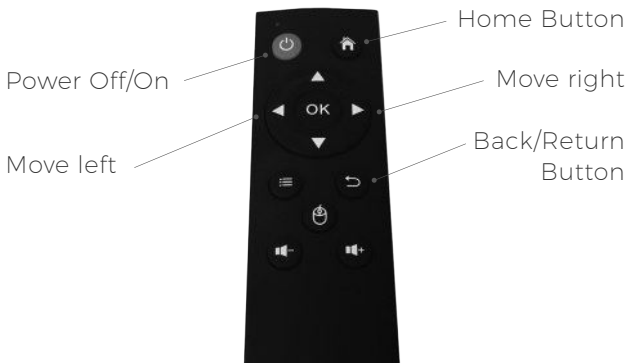


Tip: Pressing the Home button brings you to the Home Screen (as seen on page 4) anytime.

STEP 6

CONNECT TO THE INTERNET

To use your media player, you must connect it to your wired or wireless router.

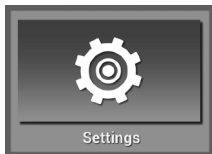

From the Home screen, use your remote to select Settings, then Network, then Wi-Fi. Press OK to enter the Wi-Fi menu, then select your network from the list.



Enter your Wi-Fi password using the on-screen keyboard. When you're done, or if you get stuck, use the Back button on the remote.

Once you have entered your password, press the Connect button. Once connected, press the Home button at the top of your remote.

For a wired connection, use an ethernet cable (not included) to connect your media player to your router. In most cases, the media player will connect automatically.

If you use static IPs, please contact support for assistance.